


Please read through this owners manual carefully before using your new tool. Use your tool properly and only for its intended use.

# Fowler 0-22" Depth Gage

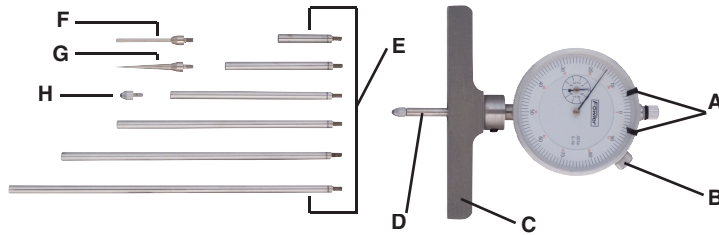

- A: Tolerance Markers
- B: Bezel Lock Screw
- C: Measuring Base
- D: Plunger
- E: Extension Rods 1-6"
- F: Spline Point
- G: Needle Point
- H: Ball Point

### Specifications

Indicator Range:	0-1.0"
Measuring Range with Extensions:	22"
Graduations:	0.001"
Accuracy:	±0.001"

### Operations

#### Zero Point Confirmation

- Setting zero for measurements 0-1". Place the depth base on a surface plate or flat surface. Loosen the bezel lock screw, adjust the dial on the depth gage to the "0" position and tighten the screw.

#### Measuring Procedure

- For measuring lengths greater than 1" add the necessary amount of measuring rods for the depth required.
- To insure correct measurements after adding additional rods, the dial depth gage should be set against a master part or a setting master

*Zeroing the indicator (without the extensions) on a flat surface.*



*Installation of an extension rod.*




*Zeroing the indicator using an extension rod and a setting master.*



Please read through this owners manual carefully before using your new tool. Use your tool properly and only for its intended use.

# Fowler 0-22" Depth Gage

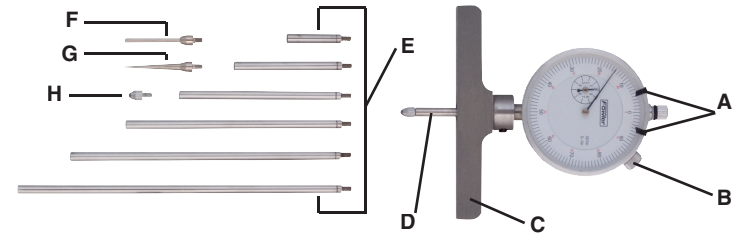

- A: Tolerance Markers
- B: Bezel Lock Screw
- C: Measuring Base
- D: Plunger
- E: Extension Rods 1-6"
- F: Spline Point
- G: Needle Point
- H: Ball Point

### Specifications

Indicator Range:	0-1.0"
Measuring Range with Extensions:	22"
Graduations:	0.001"
Accuracy:	±0.001"

### Operations

#### Zero Point Confirmation

- Setting zero for measurements 0-1". Place the depth base on a surface plate or flat surface. Loosen the bezel lock screw, adjust the dial on the depth gage to the "0" position and tighten the screw.

#### Measuring Procedure

- For measuring lengths greater than 1" add the necessary amount of measuring rods for the depth required.
- To insure correct measurements after adding additional rods, the dial depth gage should be set against a master part or a setting master.

*Zeroing the indicator (without the extensions) on a flat surface.*



*Installation of an extension rod.*



*Zeroing the indicator using an extension rod and a setting master.*

