


**Please read through this owners manual carefully before using your new tool.  
Use your tool properly and only for its intended use.**



# Wireless Transmitter

**Sender (Rear View)**  
**Battery: 3V CR 2032**

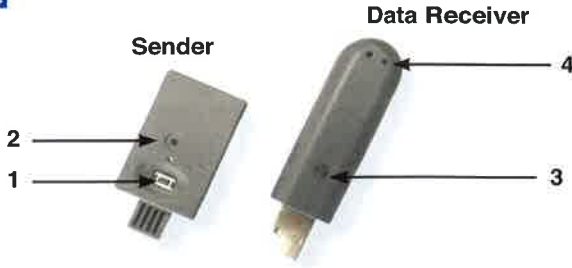

**Data Sender:** Connect the Sender to a compatible product with SPC data output port.

1. Data Sender Button
2. Data Sender Indicator

**Receiver:** Connect the Receiver to a computer or tablet with USB port.

1. Data Receiver Button
2. Data Receiver Indicator

**Direction:**

- Insert the Data Sender into an compatible product with SPC data output port and with Data Sender Button and Indicator facing forward.
- Insert the Data Receiver into a compatible computer or tablet with a USB port. The computer will automatically install the software preloaded in the Receiver driver.
- Open up a compatible computer program where you want to input the data.
- Press the Data Sender Button to transmit the data, sender will beep once when data is transmitted. Check your computer program to verify data input.

**Reset:** Each individual set has been preset by the manufacture. In the event of the Data Sender and Receiver no longer communicating, a reset is necessary to re-establish the connection.

- (1) When Receiver is connected to a computer, long press the Receiver Button until Receiver Indicator light starts to flash.
- (2) With Sender inserted in a Fowler gage, long press and hold the Sender Button for 5 seconds as the Sender Indicator flashes. Let go the Sender Button and wait for two short beeps sounded from the Sender. (If a low tone "beep" sounded, the reset was unsuccessful; Please remove the battery and reinsert it. Follow the Reset steps again from beginning to reset.)
- (3) Press and hold Receiver Button until the Receiver Indicator stops flashing. Reset completed.

## Trouble Shooting

- Check battery when Data Sender Indicator does not light and data does not transmit.
- With a fresh battery, if data does not transmit, check all connections. Reset the Data Sender and Receiver if necessary.
- Unplug and re-plug the Receiver from the computer when no data is transmitting.
- Contact a computer or program professional when data would not transmit correctly.

**Note:**

- Check with authority for wireless regulation and for safe use. Do not tamper with wireless transmitter.
- Unplug and disconnect from power source when the wireless DataConnect Kit is not in use.
- Adaptable gages include but not limited to: Economy and IP54 Economy Calipers, Indi-Max Indicators
- Adaptable programs include but not limited to: Microsoft Excel, Word, CAD, and Notepad.

